



Ten Steps for starting with your Gypsy.

- 1 Check you have all the relevant cables in your box – 1 mains charger, one Gypsy to PC cable, one Gypsy to computer cable and one cartridge link label.
- 2 Switch on your G with the black button on the right hand side of the machine.
- 3 Follow the screens **STRICTLY** in the order they appear – calibration and time will be set at this point
- 4 Accept the terms and conditions then select OK
- 5 Next you should have the screen showing the Cricut Bug and a spanner. NB the Photo App in the centre below is not available yet and will be on future updates.

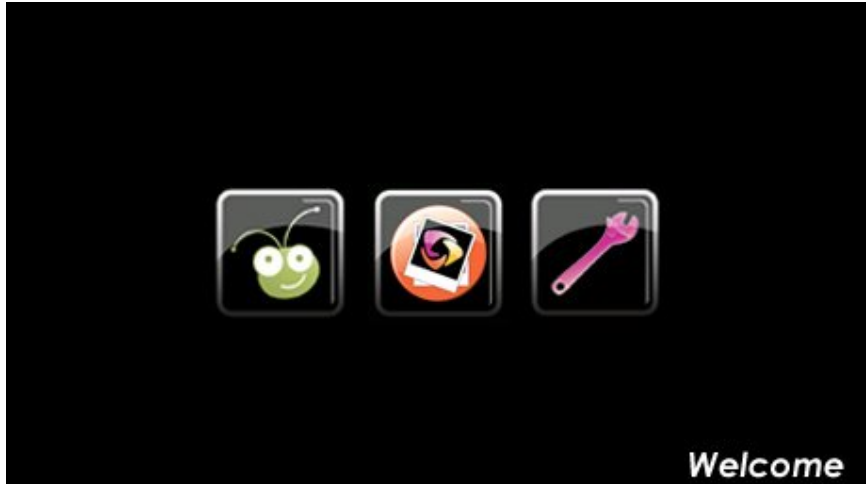

- 6 Click on the spanner and to the left at the bottom you will see a build number – this should be 161 – if any less you will need to update your G (later in the process.).

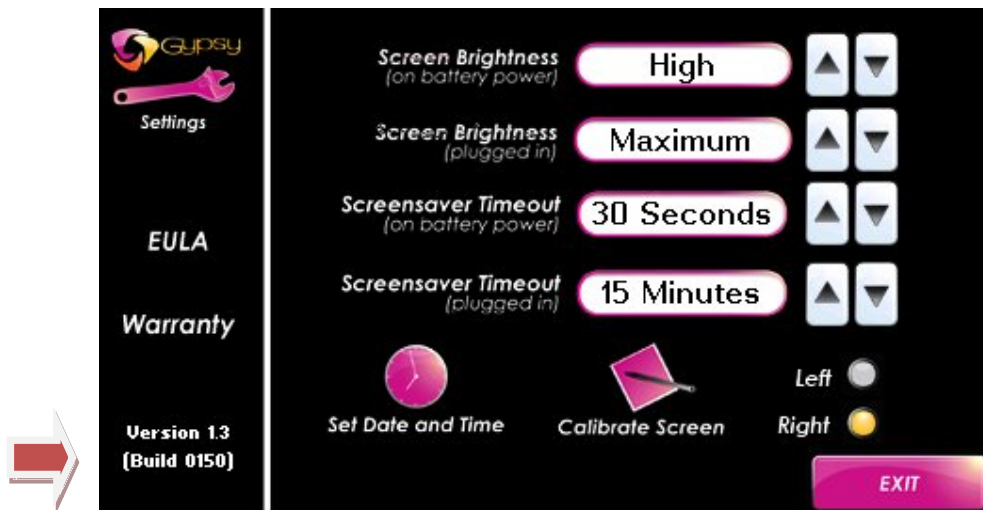

- 7 Click on the Cricut Bug and you will be into the design screen. The image at the top right shows the battery is charging from the mains



- 8 To check the power level of your G press the round silver button on the right of your machine and a battery symbol will show – pink shows the level of power, yellow shows it need to be charged. Your blue light on the right side will also turn red when power is low



- 9 When connecting to your Cricut you will need to do a two part update of the Expression, Create original Cricut machine - again instructions will be given. Before you load any Cartridges – register your machine at www.cricut.com and download Gypsy Sync to your PC or Mac – this will then allow transfer and backup of Gypsy files and will also enable you to update your G.
- 10 When connecting to your Cricut you will need to do a two part update of the Expression, Create or Original Cricut machine - again instructions shown should be followed to the letter.

IT IS IMPERATIVE THAT ALL THE ABOVE ARE FOLLOWED EXACTLY AND COMPLETED BEFORE LOADING CARTRIDGES.

For further help please e mail gypsyroseroo@yahoo.co.uk, OR if you believe your Gypsy is faulty please contact your craft supplier.